

Crimping Weather Pack Connectors With 600-002 Tool


- 1- Install seal on wire and strip insulation (1/4")



- 2- Hold weather pack pin in position in correct gauge slot with crimp tool



- 3- Insert stripped wire into the pin and hold in place while full crimping terminal.

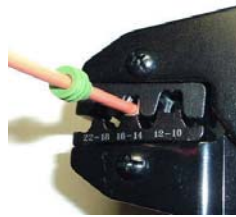

- 4- Inspect for proper crimps on wire and insulation.



- 5- Slide seal forward on wire covering the insulation crimp.



- 6- Insert crimped terminal into weatherpack connector until pin locks in.



- 7- Close connector body locking in pin and seal.

